


PEJO Type C

Order no.	Max. load SWL	Welding throat dim. "a"
C 201	1	4 mm (0.15")
C 202	2	4 mm (0.15")
C 203	3	6 mm (0.24")
C 204	4	6 mm (0.24")
C 205	5	6 mm (0.24")
C 206	6	8 mm (0.31")
C 208	8	8 mm (0.31")
C 210	10	8 mm (0.31")
C 215	18	10 mm (0.48")

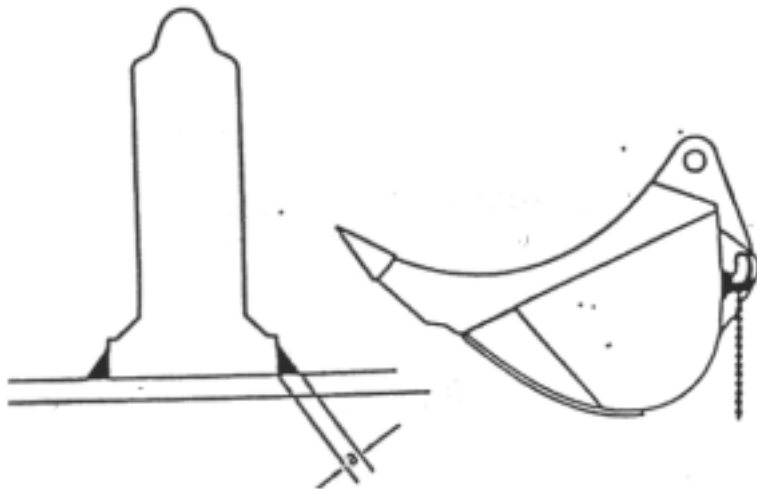

PEJO AB


Box 73

S-777 22 Smedjebacken

Tel.+46 240-76075 Fax:+46 240-74830




Safety Hooks

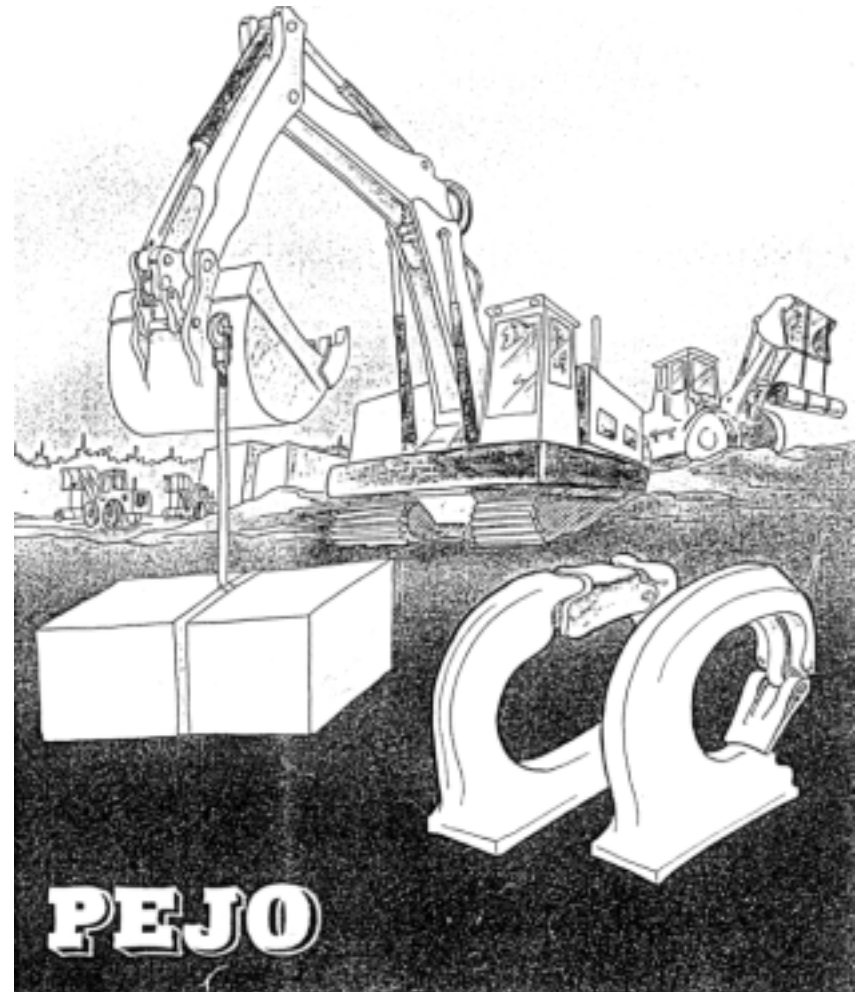

Installation

1. It is absolutely essential for the safety hook to be facing the right way when it is welded in position. Turn it so that its largest end will carry the load during lifting operations.
2. Place the safety hook as close to the centre-line of bucket as possible.
3. Make sure that the safety hook is located in such a way that it obtains as much protection as possible from link arms and bucket brackets. If the hook is wrongly located, it can be deformed by rocks, etc.
4. For welding works use standard electrode AWS E 7018 (DIN 193:E5153B10). See the table beside for the welding seam dimension ("a").
5. The Machinery Directive (89/392/EEC) modified states a test factor of 1.5 times the nominal load after welding.


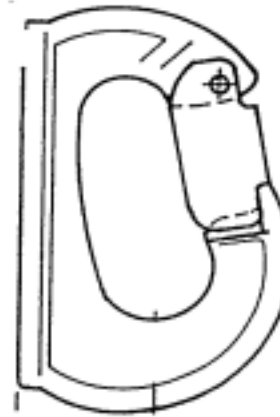


PEJO Type U

Part no.	Max. load ton	Welding throat dim. "a"
U 200	0.5	4 mm (0.15")
U 201	1	4 mm (0.15")
U 202	2	4 mm (0.15")
U 203	3	6 mm (0.24")
U 204	4	6 mm (0.24")
U 206	6	8 mm (0.31")
U 208	8	8 mm (0.31")

To be considered when lifting

1. Never overload.
2. Avoid jerks, lift slowly.
3. Ensure that the lifting tackle is correctly located in the lifting hook.
4. Ensure that the lifting tackle cannot slip of the hook.
5. Check the lifting tackle carefully - worn and damaged tools must not be used.
6. The machine should be placed on a firm and stable surface.
7. Observe the safety instructions of the machine.

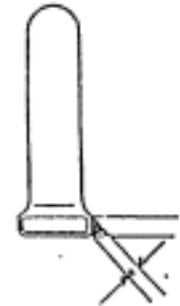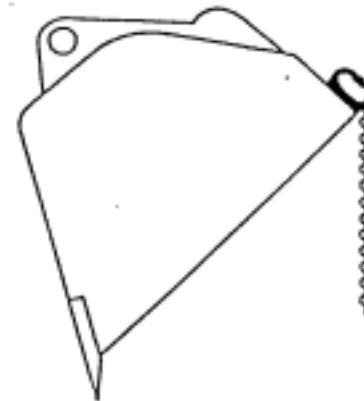

PEJO AB

Box 73

S-777 22 Smedjebacken

Tel.+46 240-76075 Fax:+46 240-74830

